

INSTRUCTIONS ON HOW TO USE YOUR SILKY SAW

1. Silky saws are designed to cut on the **pull** stroke. The thin blades will not bow because they are under tension while being pulled across the surface to be cut. If your saw ever becomes caught in a branch squeeze. **DO NOT PUSH HARD** and **NEVER WRENCH OR TWIST THE HANDLE**. These actions may damage the blade. Always lift the weight off the blade to release the saw.

2. Silky's precision engineering results in a **fine kerf**, very little force is needed to saw. So do not use muscle to speed up your sawing. **LET THE SAW DO THE WORK** for you while you **pull** it across the wood.

3. Impulse hardened blades cannot be re-sharpened by a hand file.

4. Keep your blades clean by using solvent. Keep the solvent away from the handle.

5. When not in use, store the saw in a protective sheath and away from moisture.

6. Silky is not responsible for any damage resulting from the misuse of Silky saws.

